



LYON ¼ turn

Installation instruction
Montageanleitung
Instruction de montage

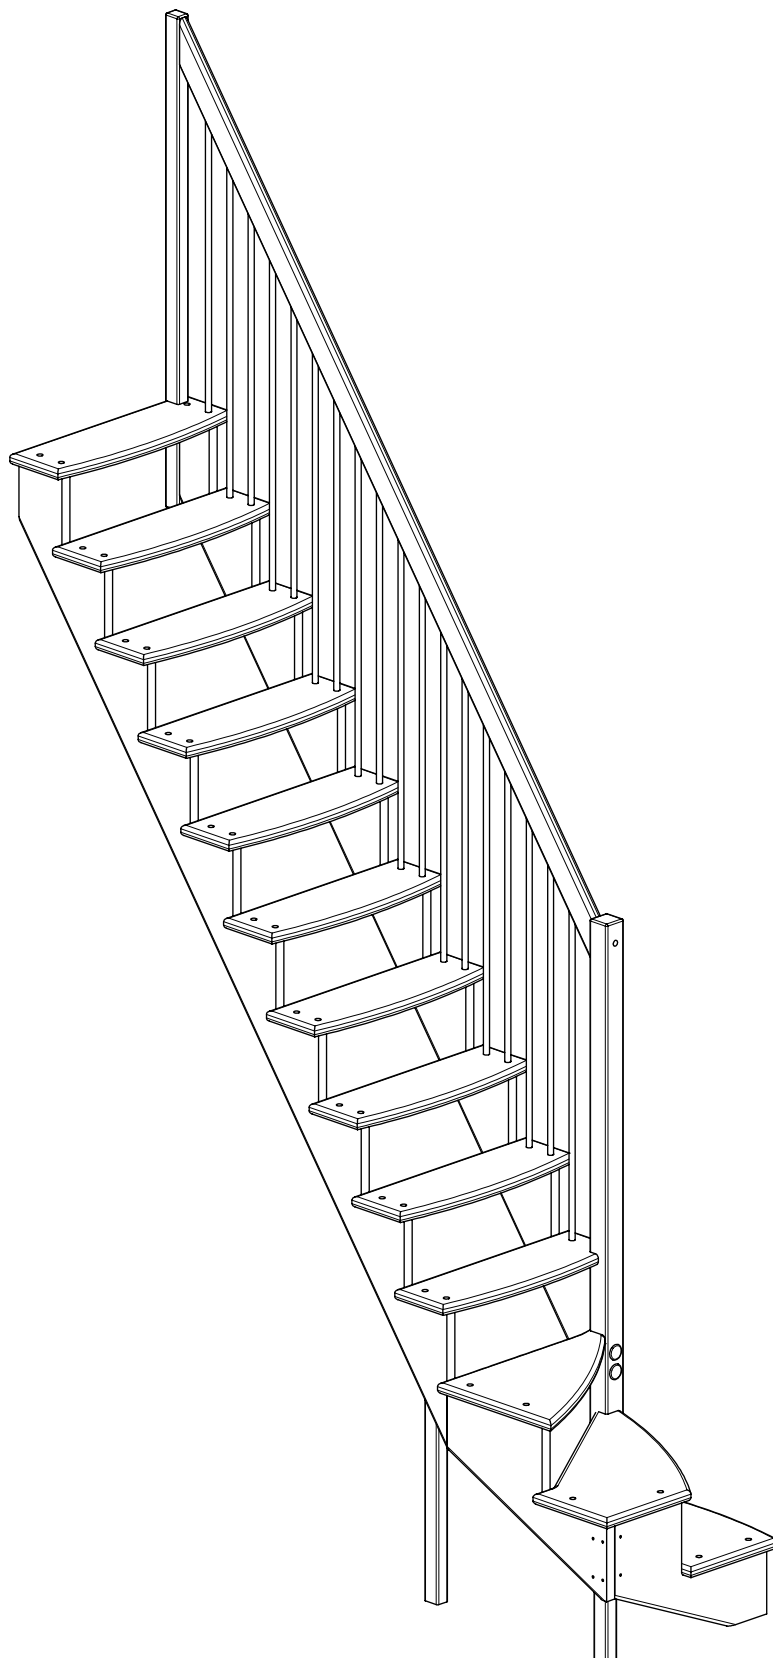


1

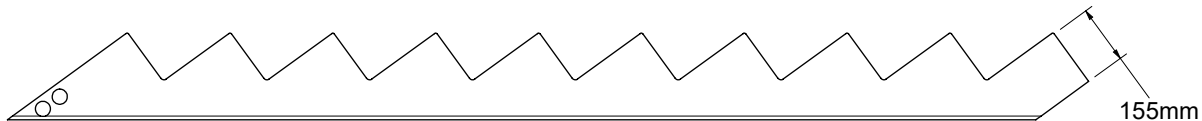

x 1

2

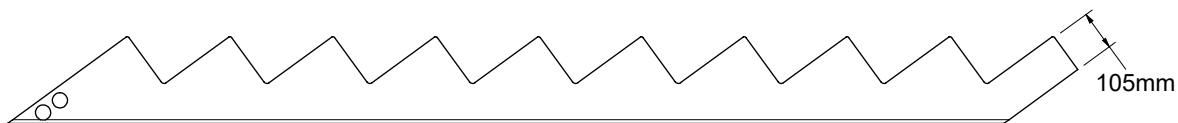


x 1

3




x 1

4

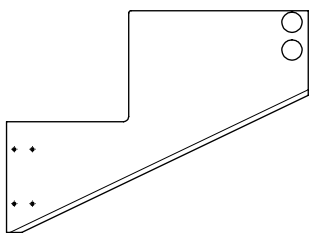


x 1

5

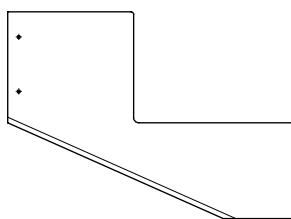


x 1

6



x 1

7



x 8

8



x 1

9




x 1

10




11

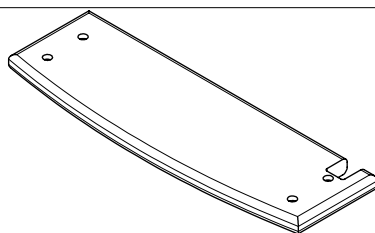


x 1

12

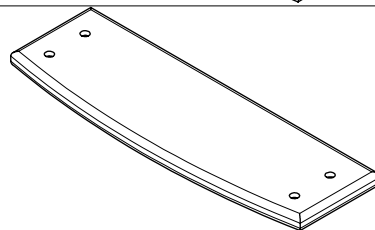

x 8

13

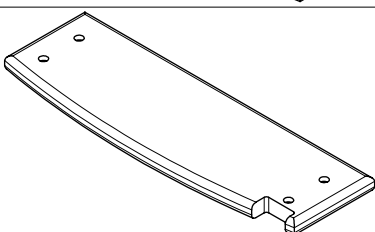


x 1

17a




x 9

17b




x 9

18

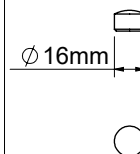


x 26

19

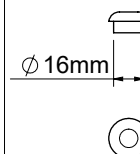


x 3


14

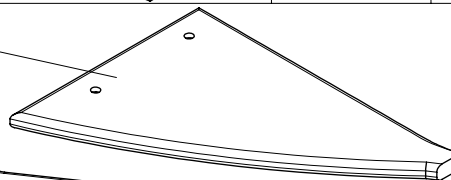

15

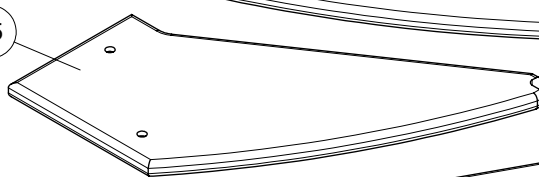


16

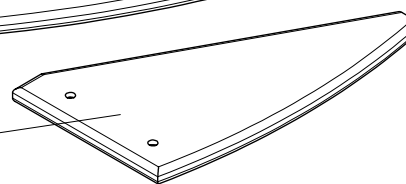


x 1

20






x 4
C1-09910


21





x 2
R3-90050

30  x 6 R1-63800	31   x 6 R1-63810 Ø8,4	32   x 6 R1-63818 Ø8,4	33   x 2 R1-63808 M8 x 60	34  x 4 R3-91415 Ø8 x 40	35   x 5 R1-63286 Ø6 x 60
36   x 9 R1-63288 Ø6 x 80	37  x 6 R3-72165 Ø6	38   x 2 R1-63807 M8 x 70	39   x 2 R2-85310 Ø8,4 / Ø24	40   x 4 R3-91060 Ø8 x 60	41   x 8 R3-91360 Ø5 x 25
42  x 4 R3-91290 Ø12 x 60	43   x 46 R3-72110 Ø5 x 50	45  x 1 R1-63813 13mm (M8)			



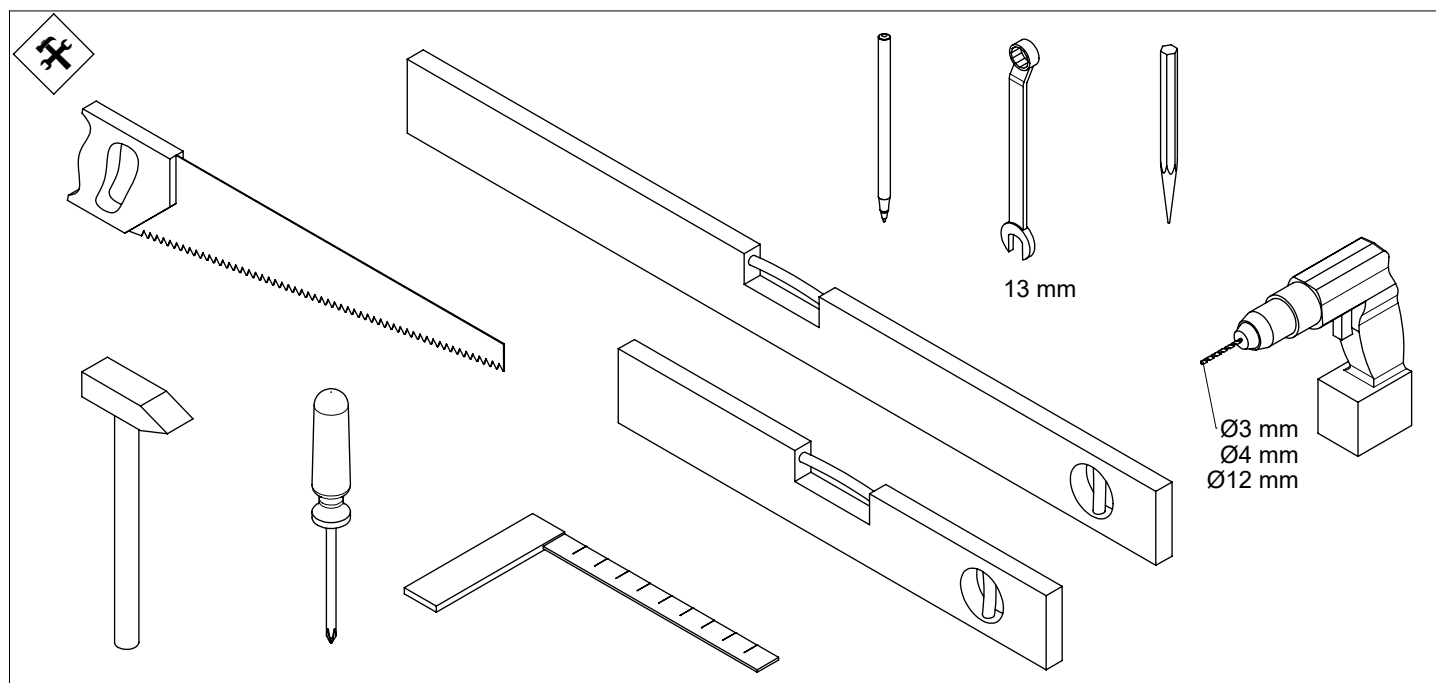


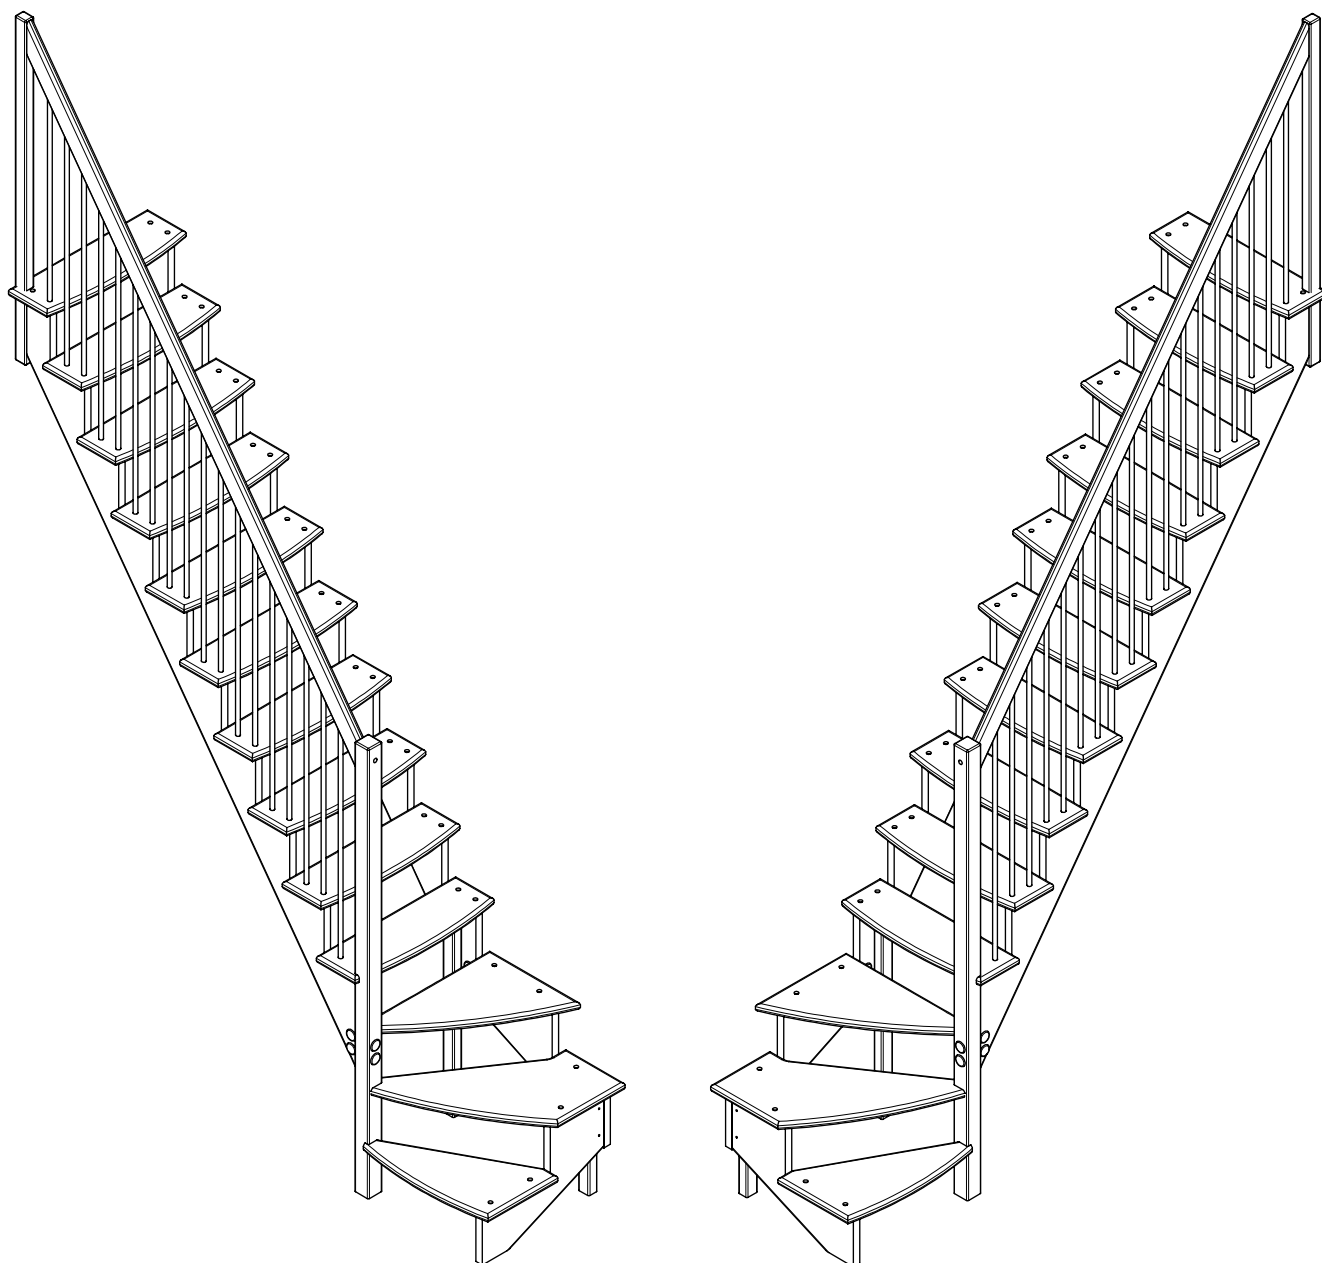


1

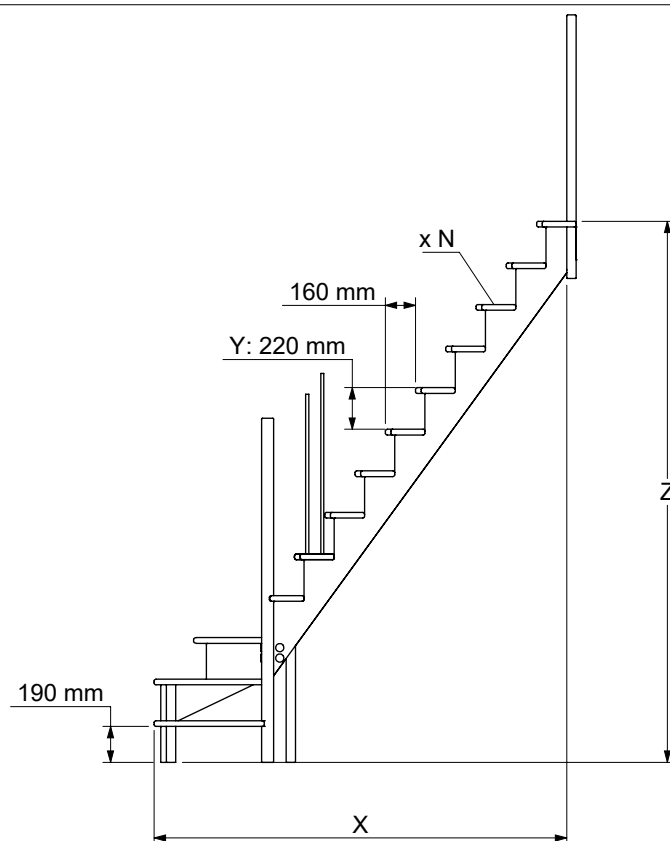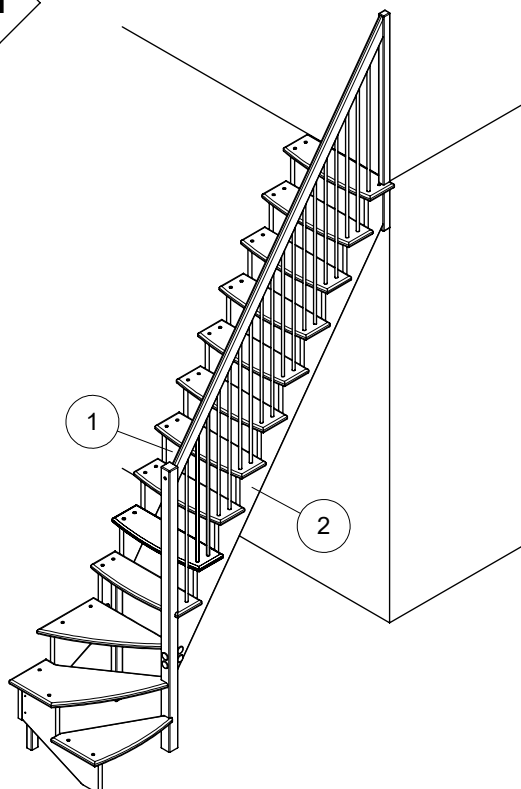


Y: 220 mm			
N [st / p]	Z [mm]	X [mm]	
		B: 650mm	B: 750mm
11	2420	1863	2013
12	2640	2023	2173
13	2860	2183	2333

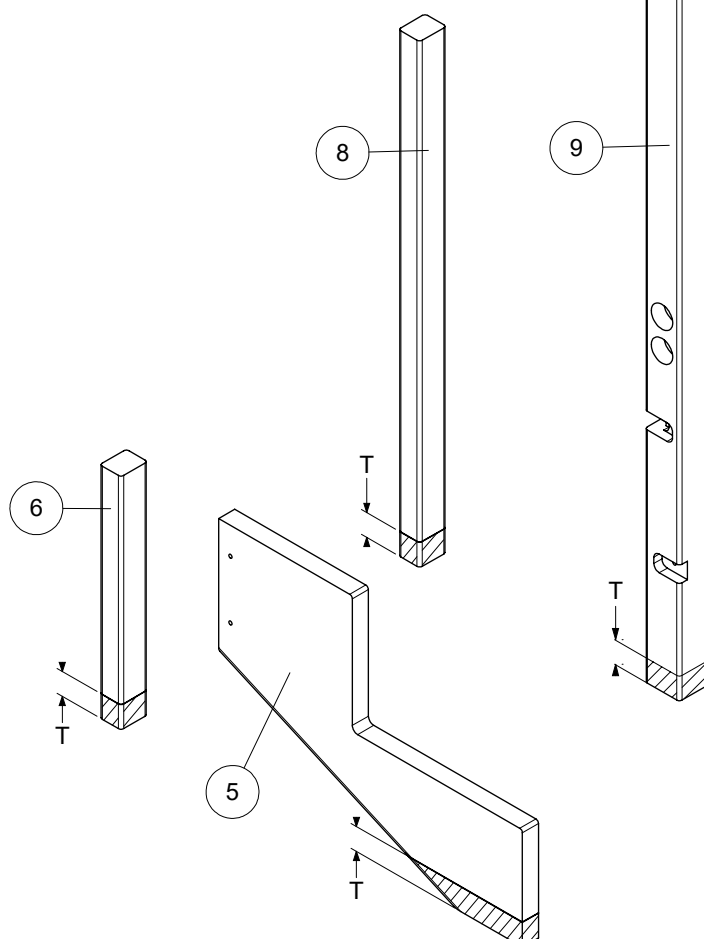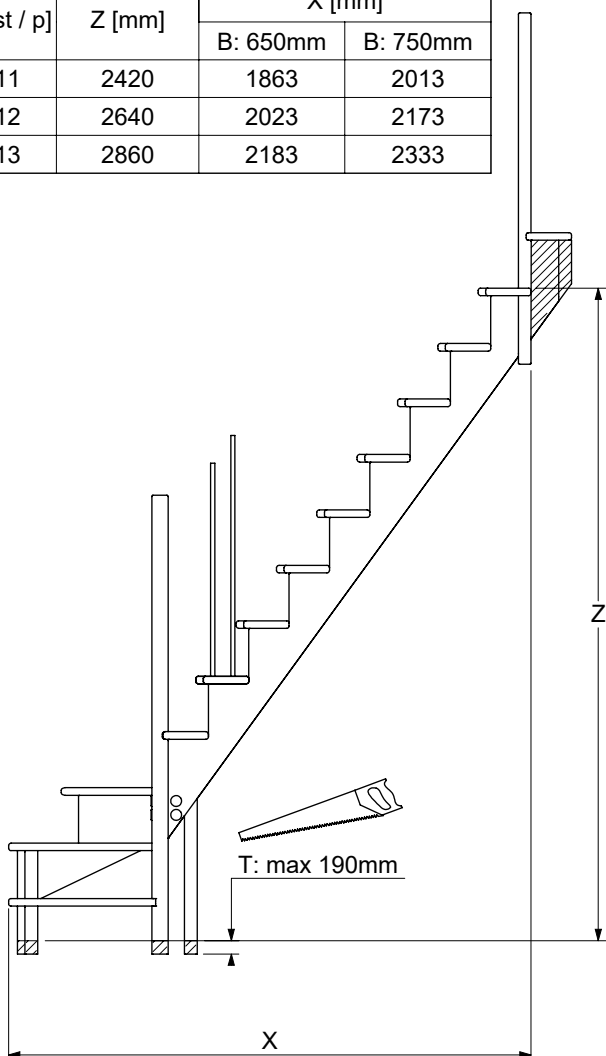
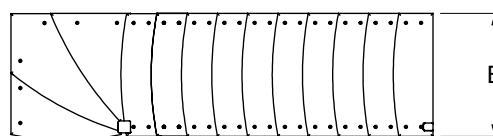


2

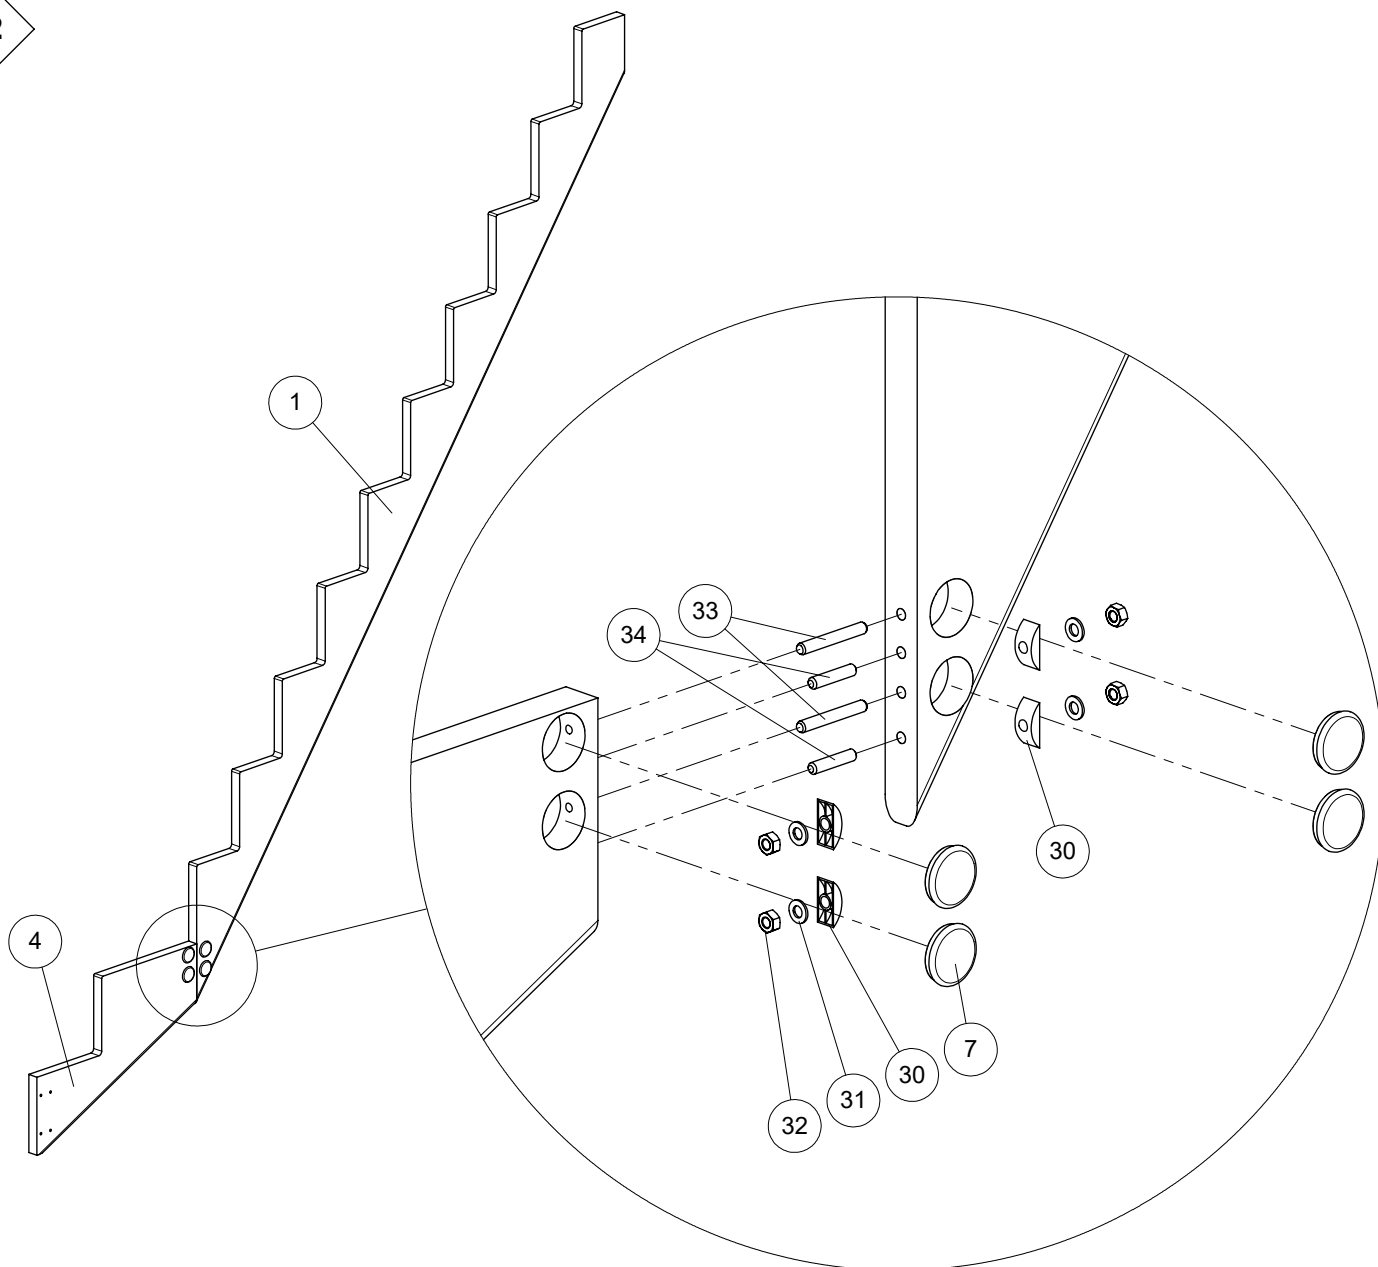


3

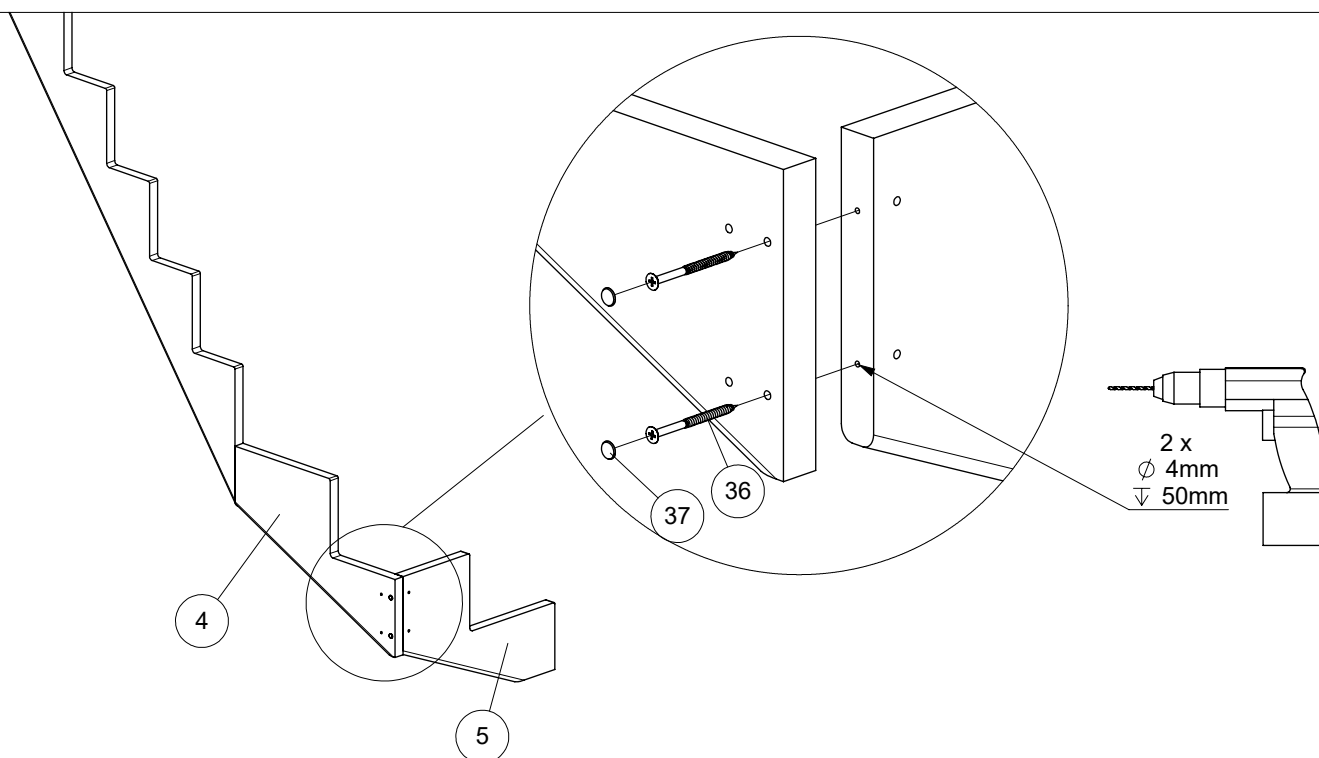

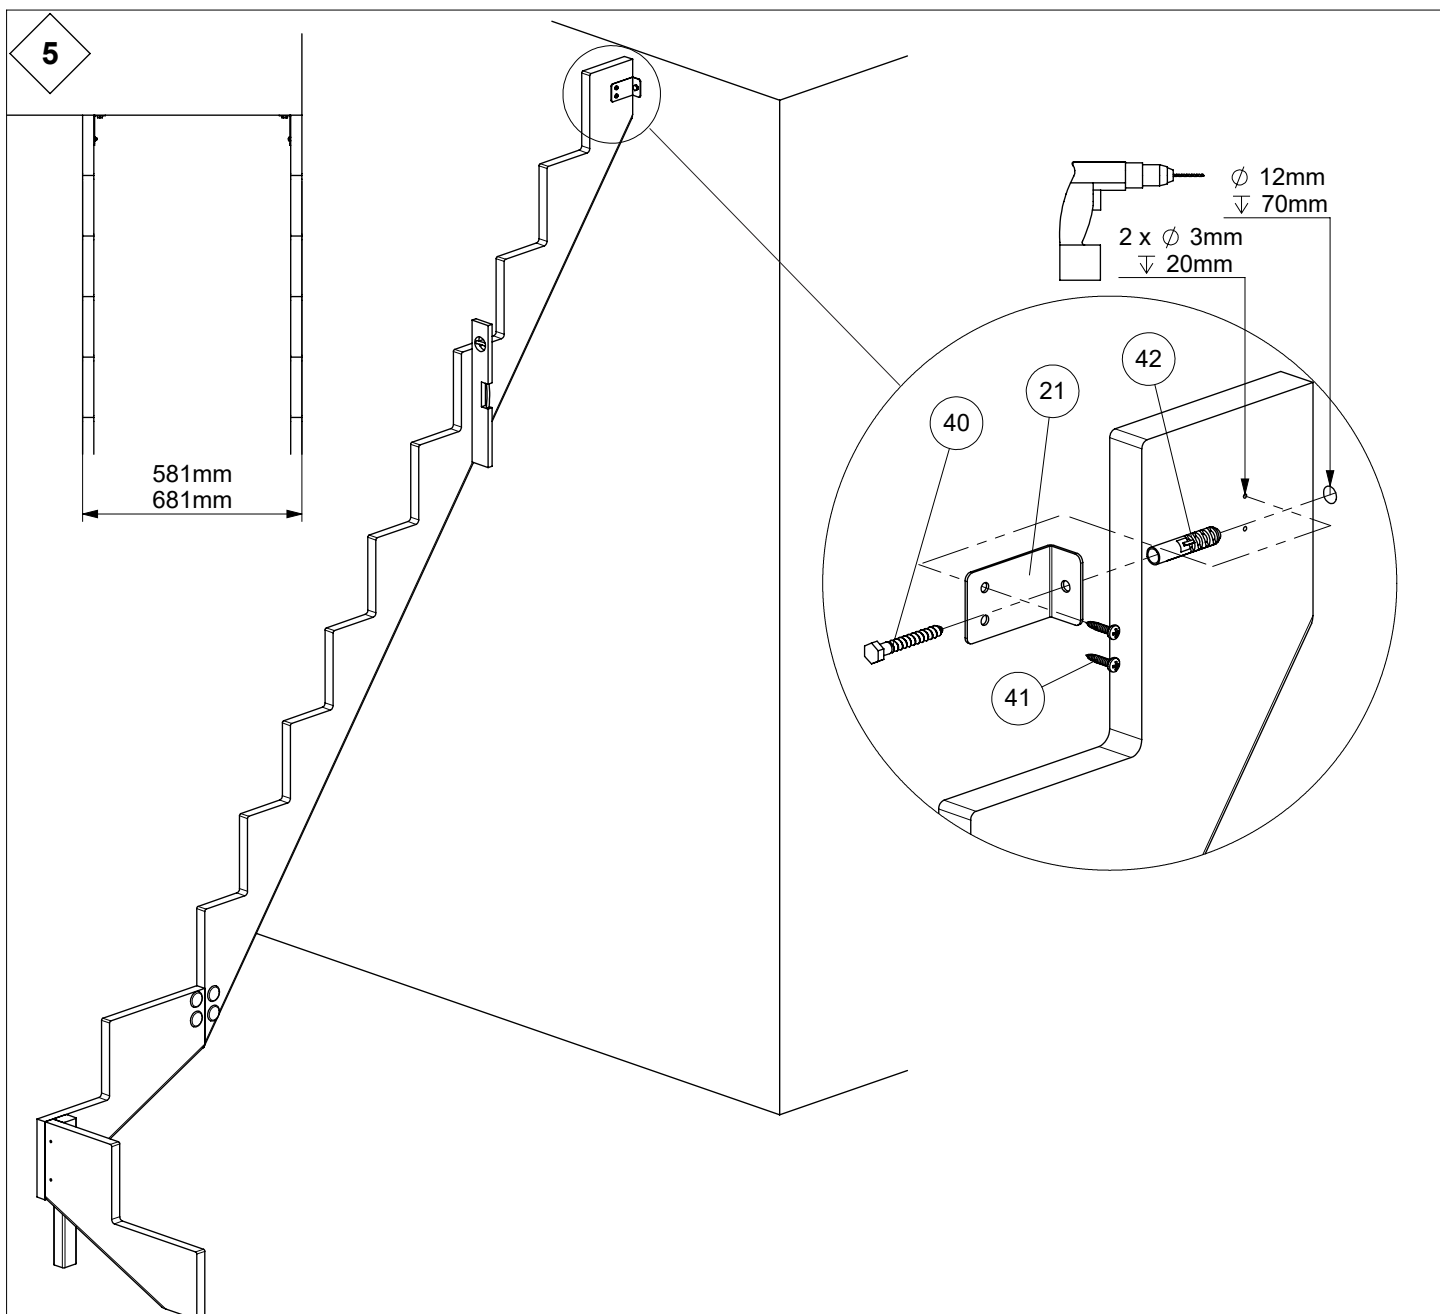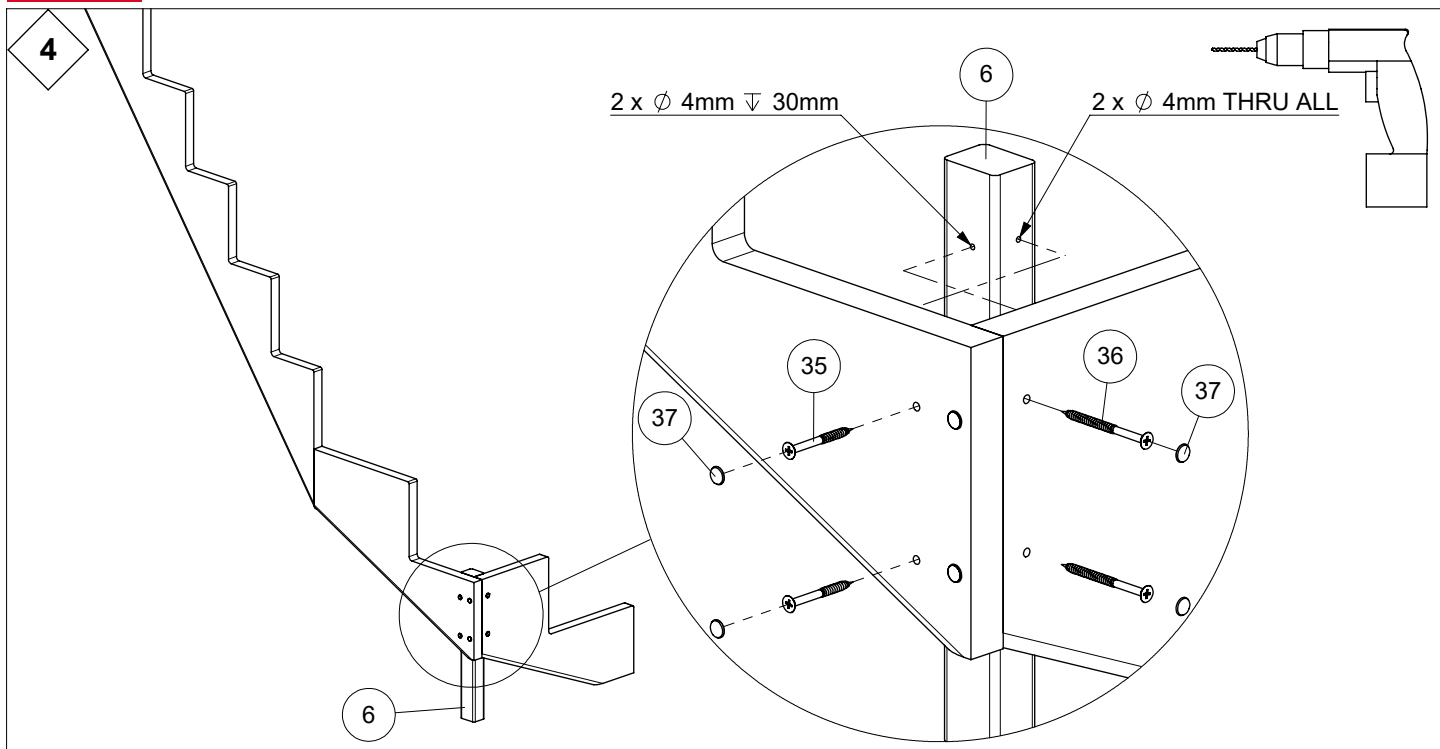

6

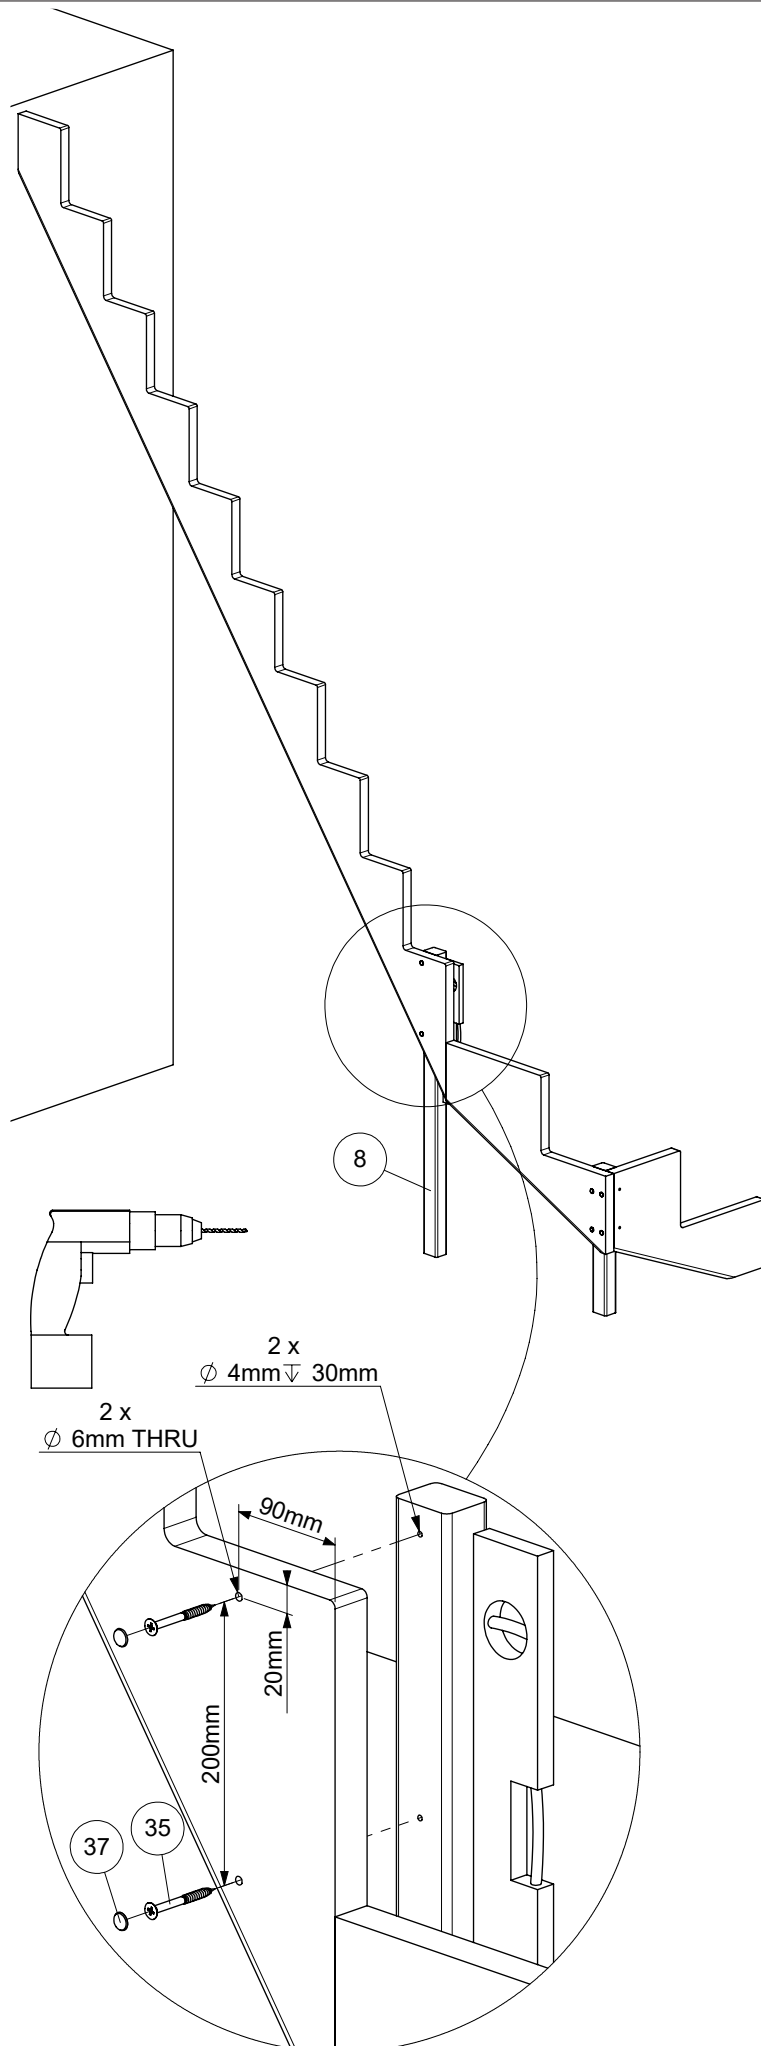

7

1122mm




2 x Ø 4mm ▽ 70mm




2

10

2

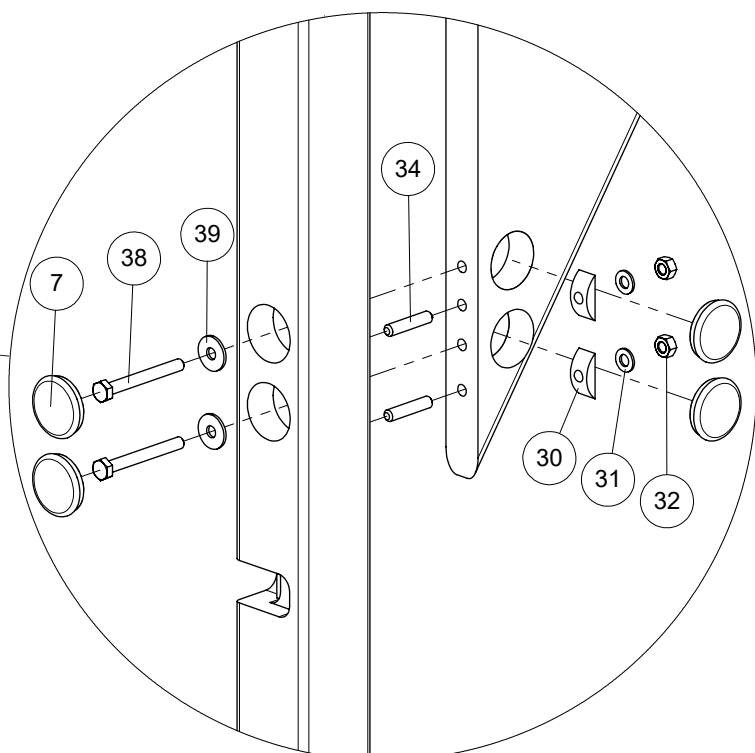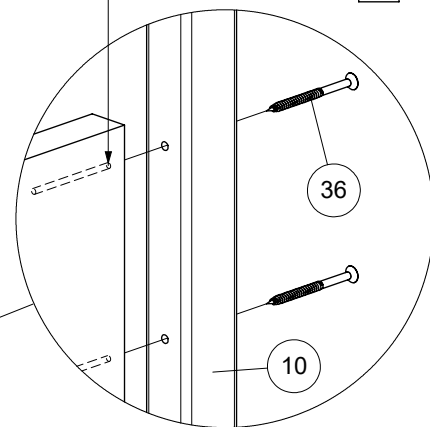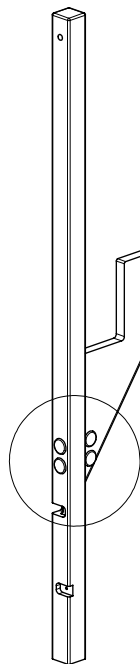


8

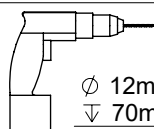


Ø 12mm
▽ 70mm

2 x Ø 3mm
▽ 20mm

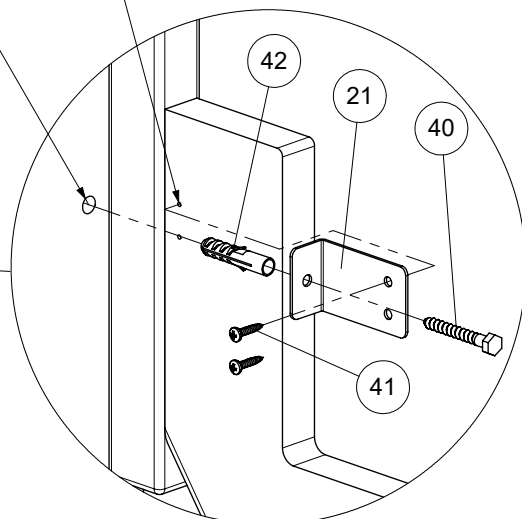


580mm
680mm


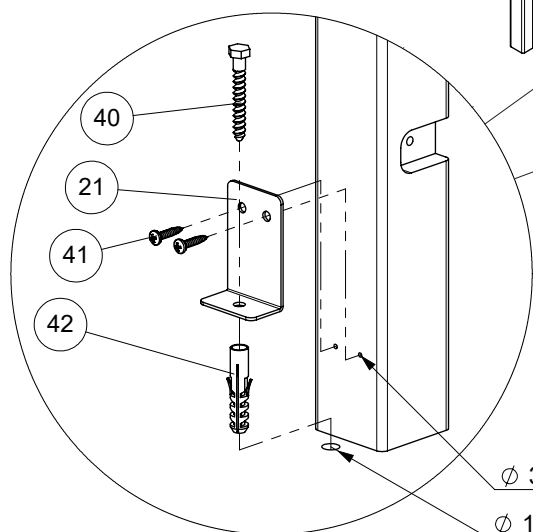


2 x
Ø 3mm ▽ 20mm


Ø 12mm ▽ 70mm

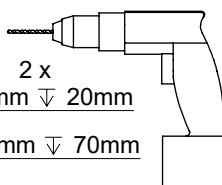





9

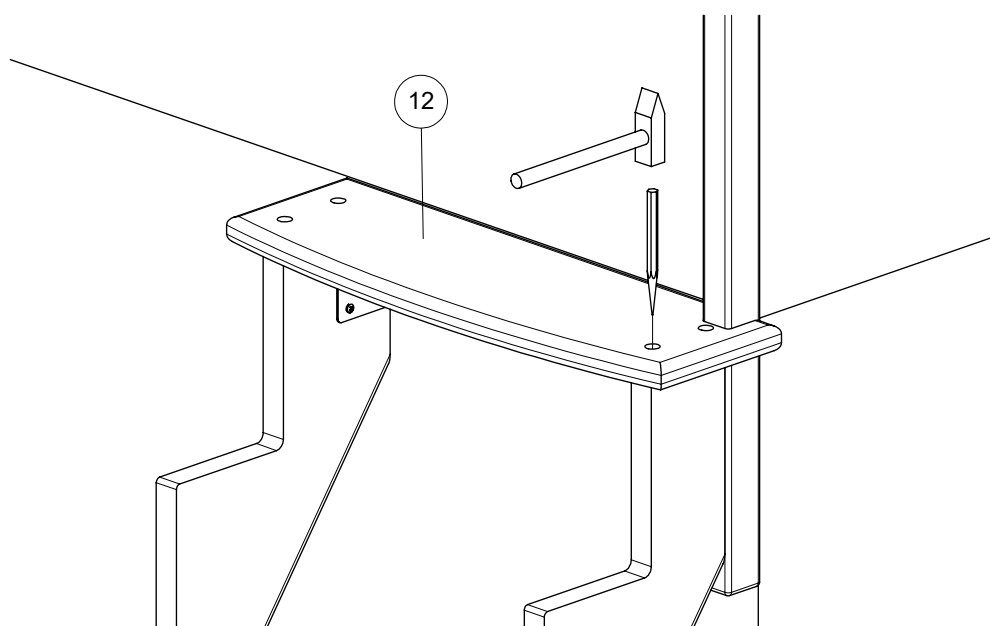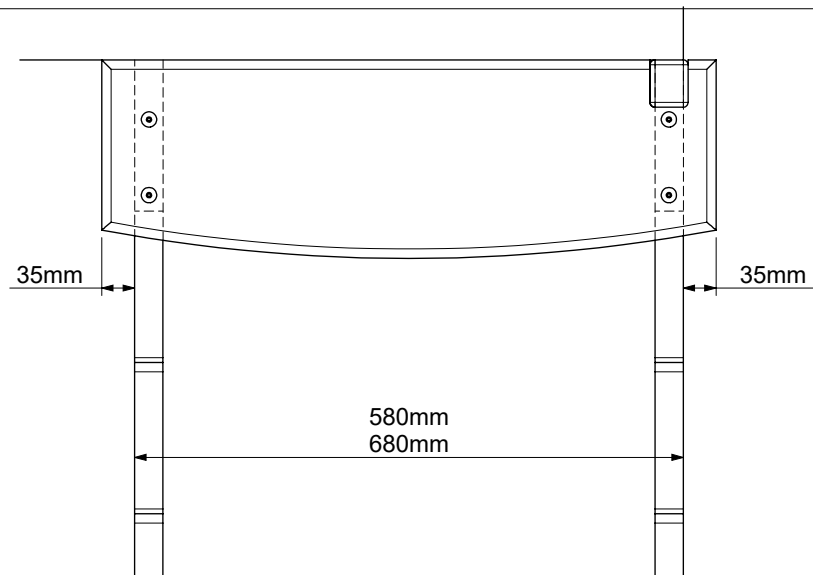

10

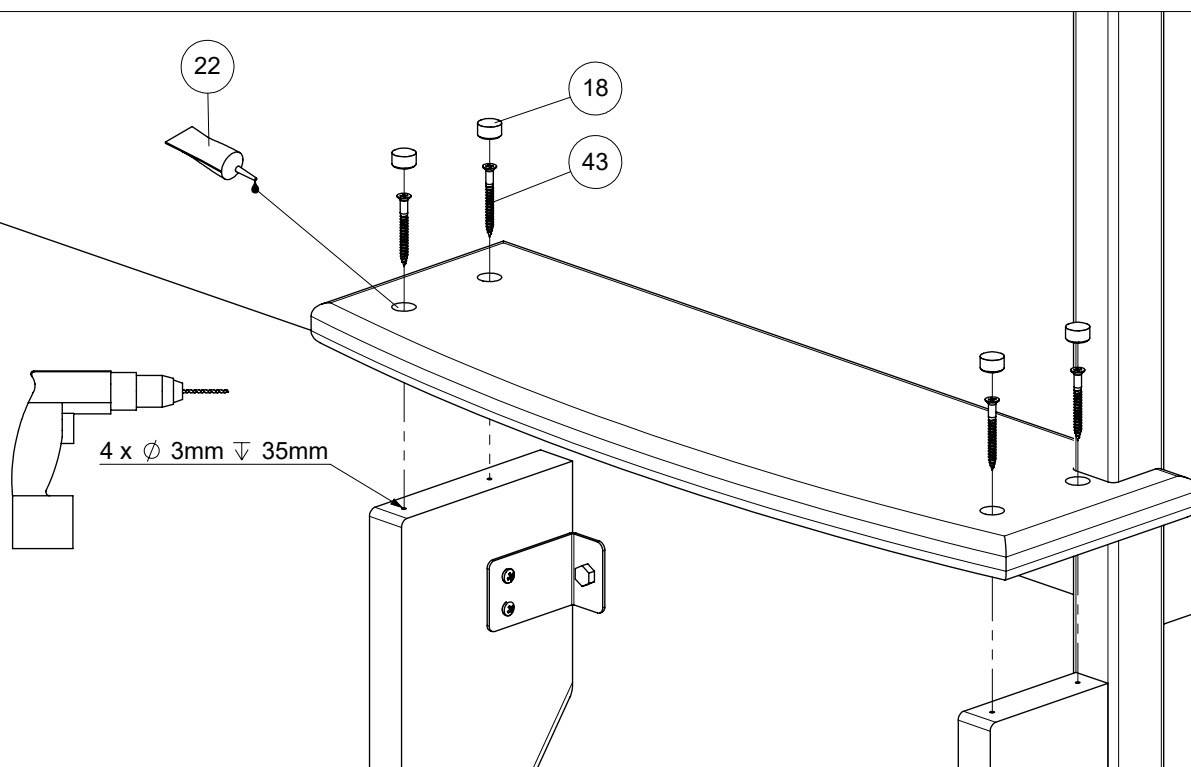

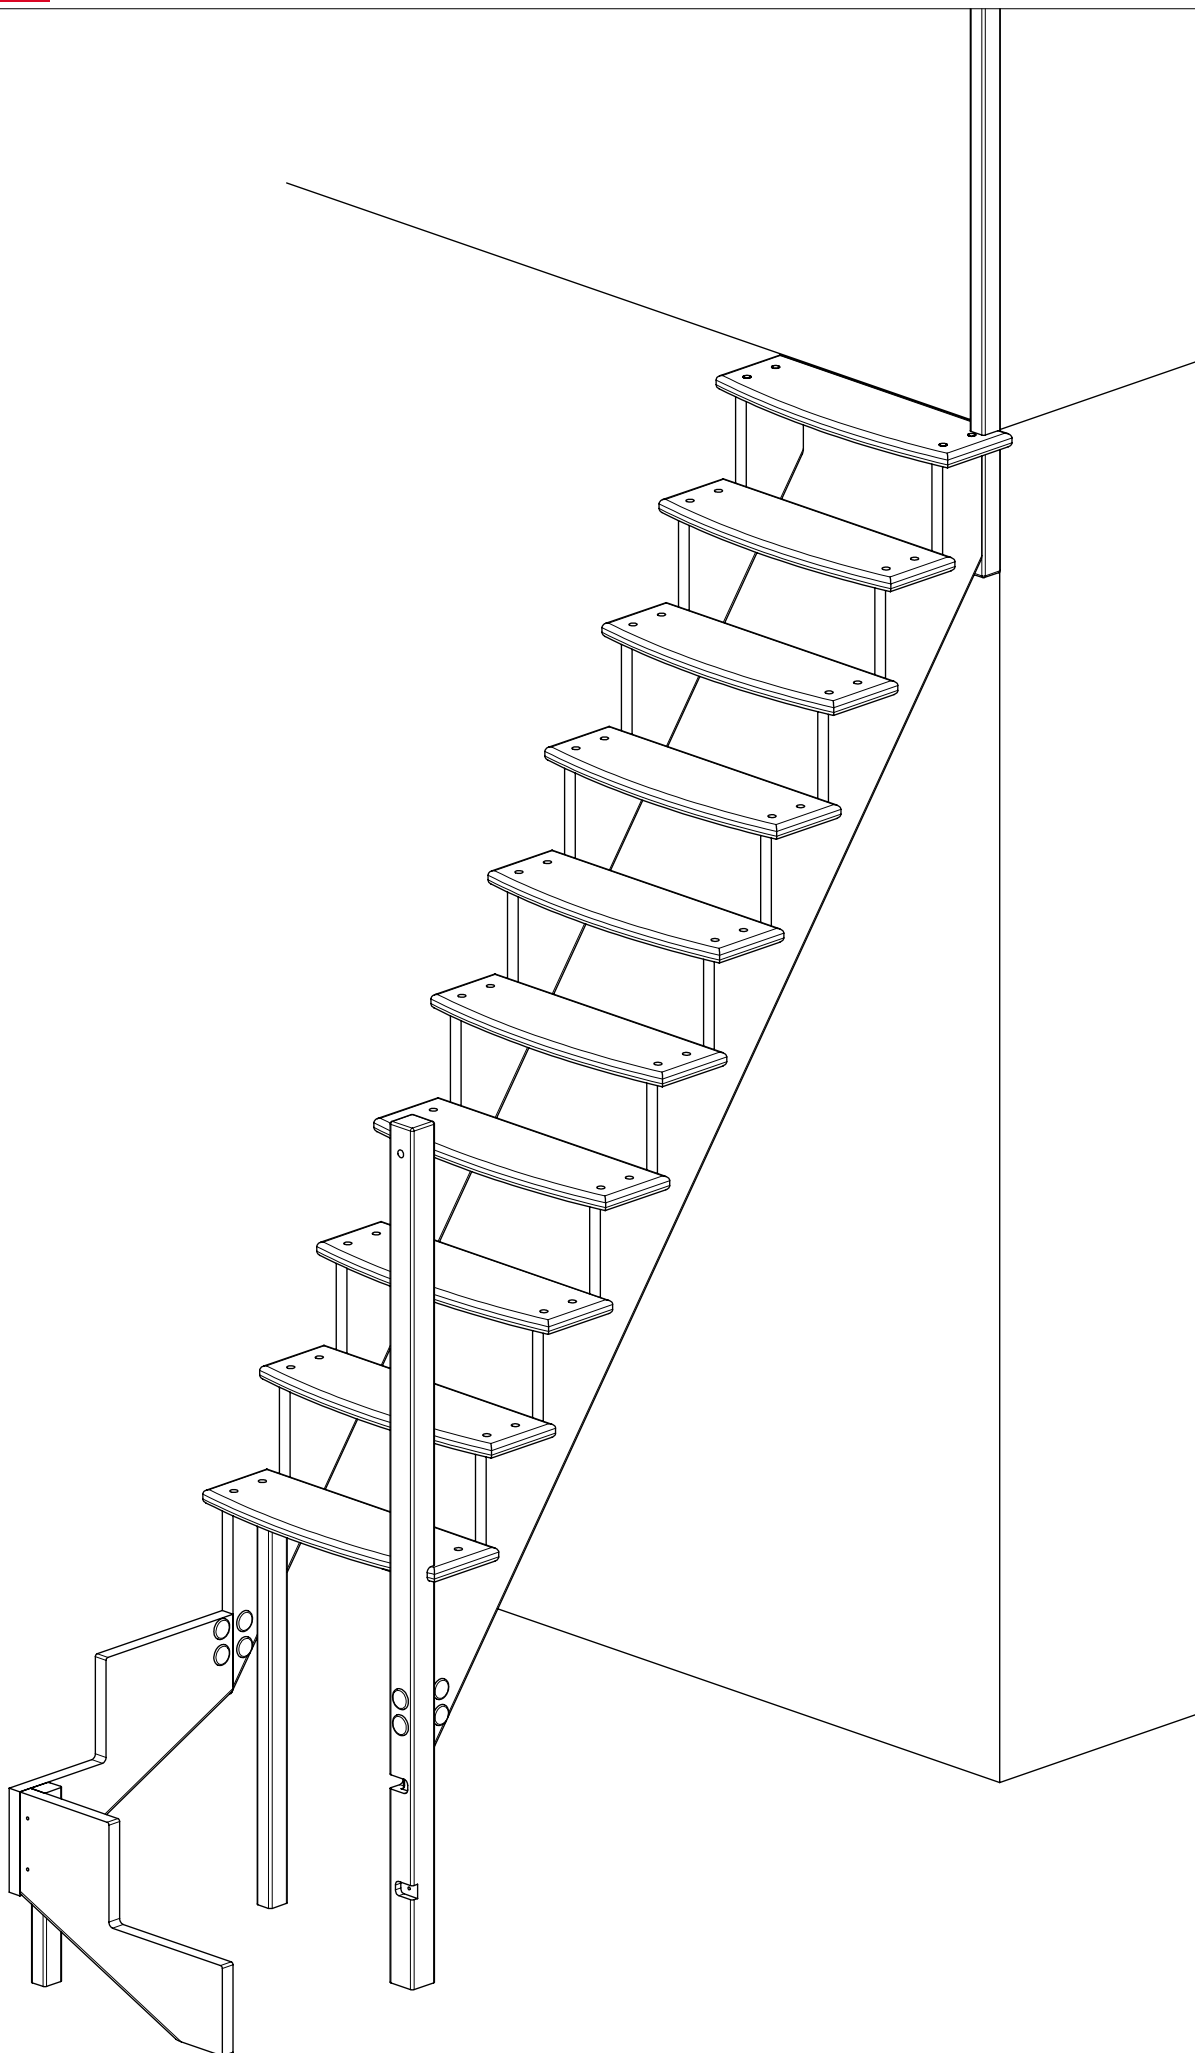

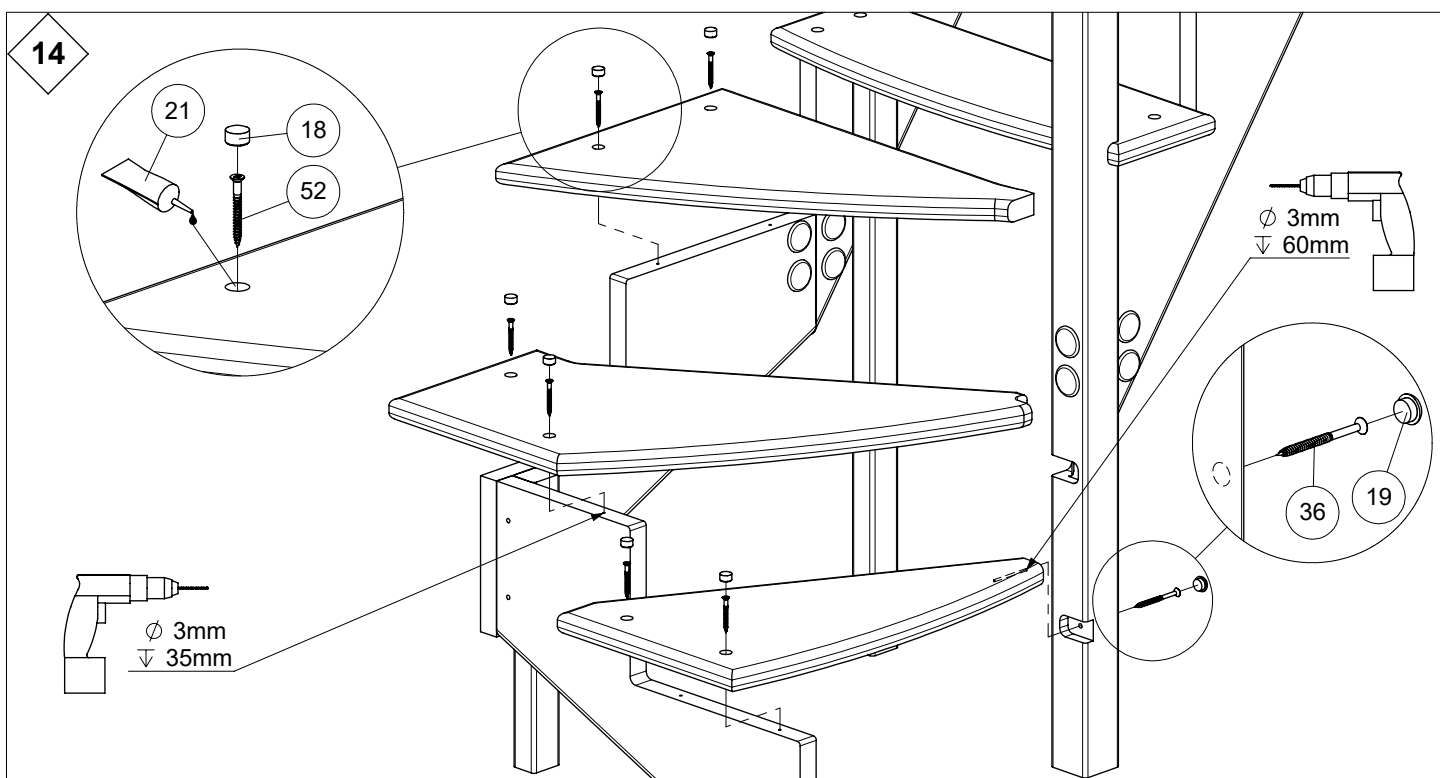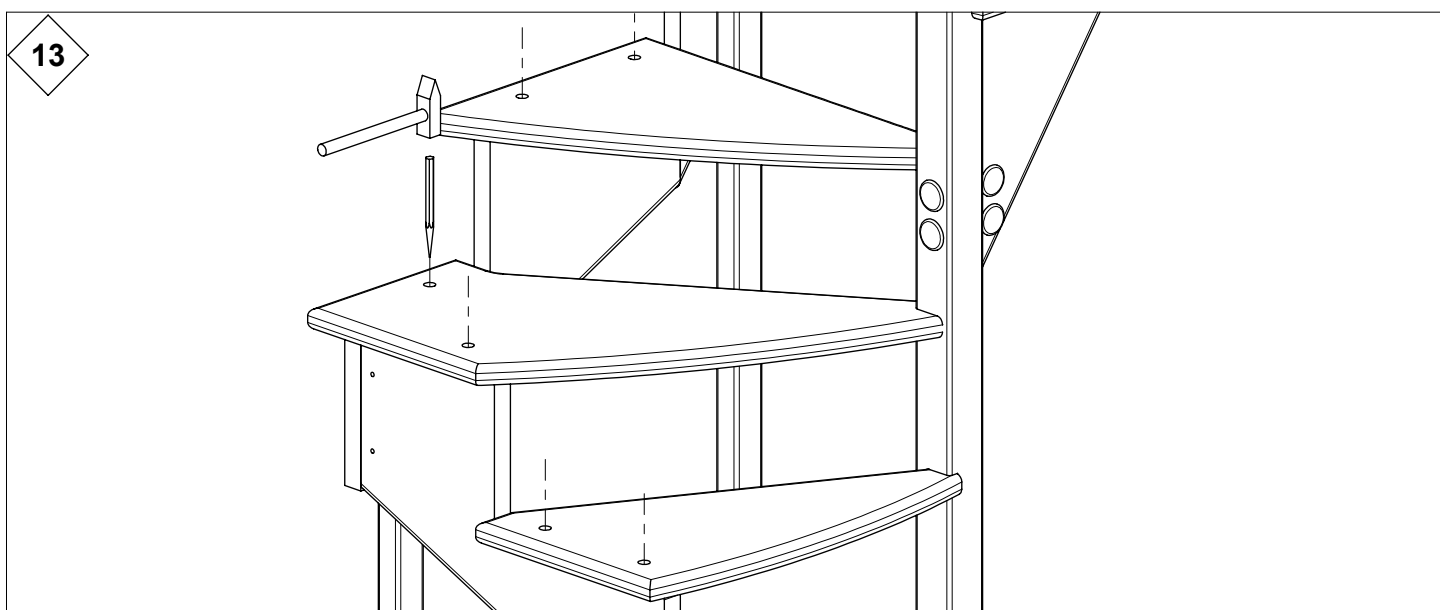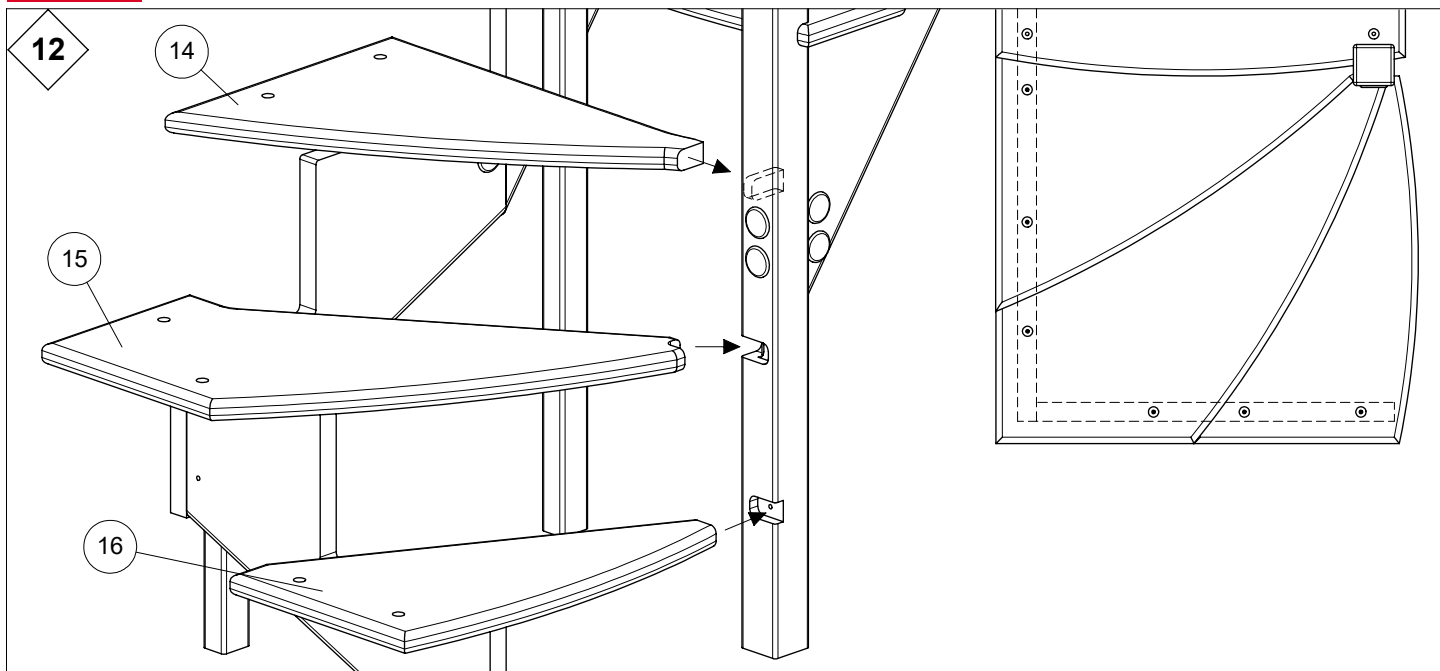

15

